


# VWW Window Well Measurement Instructions

## Height

1. To meet egress code, window sill must not exceed 44" high above the floor. Window opening shall have a minimum net clear opening of 5.7 square feet. (See step #1)

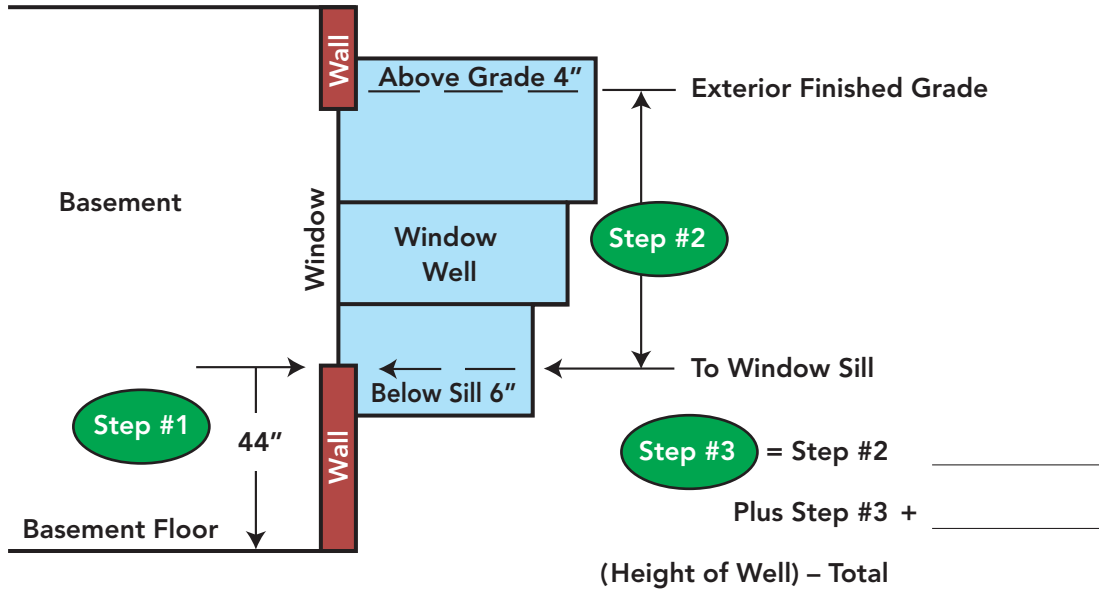


2. To measure for window well height, measure from window sill opening to finished grade (include mulch, turf, etc.). (See step #2)
3. Add 4" to above finished grade and 6" below sill for a total of 10". This number needs to be added to measurement of step 2. (See size chart to choose height.) Go to next size exceeding total measurement. (See step #3)

## Extension

Extension = total inches from wall to outside of well.  
 Step extensions are in increments of 4".

4. If egress is required, bottom run of extension needs to start at 36". (See step #1) (If non-egress extensions are optional, see window well size chart.)

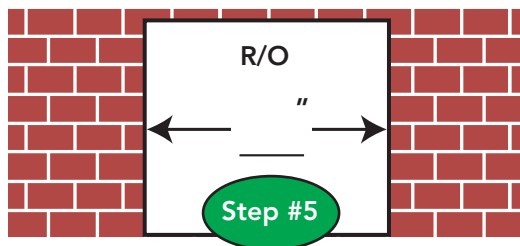

R/O = \_\_\_\_\_  
 Step #6 + 4" \_\_\_\_\_  
 Min. Well Width = \_\_\_\_\_ See Size Chart  
 Well Model # = \_\_\_\_\_  
 Height      Extension      Width

5. Measure rough opening.
6. Add a minimum of 4" to total width. (See step #5) See size chart and go to next size exceeding total measurement.